

# General information

Welcome to DIALux evo This wiki is intended to help you to work quickly and effectively with DIALux evo. If you have already had experience with Windows programmes, you should not have difficulty getting started. To enable you to acquire the knowledge to work professionally with DIALux DIAL offers regular training courses and seminars. You can find out about the dates and contents of these seminars at [www.dial.de](http://www.dial.de) [1]. Innovations and updates can also be found on our homepage

## CD

### System requirements

#### System requirements

- CPU with SSE2 support
- 4 GB RAM (min. 2GB)
- OpenGL 3.3 graphics card(1 GB RAM)(for evo 4.0)
- OpenGL 3.0 graphics card(1 GB RAM)(for evo 4.1)
- Resolution min. 1024px x 768px
- Windows Vista SP2 (32bit/64bit)
- Windows 7 (32-bit/6-bit)
- Windows 8 (32-bit/64-bit)

### Installation

Start the 32-bit or 64-bit setup.exe file and follow the instructions in the installation programme. To improve the software certain information is sent to DIAL during setup: - a unique ID whereby no direct inference to your person is permitted - information regarding the operating system installed (version, service pack...) - hardware information ( RAM, display resolution, ...) - detailed information about the capabilities of your graphics adapter

No personal data are transmitted. Further information is available here:

[Terms and conditions of use](#)

[Data security](#)